

Programming Security Codes from an LCD Keypad 1832

Codes must be four digits unless otherwise indicated by your installer. Enter digits 0 through 9 only.

NOTE: We recommend that the factory default Master Code [1234] not be used.

Additional Codes

Up to 72 codes may be programmed. Codes 01-39 and 41-72 are regular access codes. Code 40 is the Master Code.

The Master Code

Press [*5]
Enter [Master Code]
Press 40
Enter [New Master Code]
Press # two times to exit.

To program a new code:

Press [*5]
Enter [Master Code]
Press [User # i.e. 01 for User 1, 02 for User 2] or [Or you can scroll through your codes by using the right arrow key. To view the code press the [*]]
Enter [New Code]
Press # two times to exit

To erase a code:

Press [*5]
Enter Master Code]
Press [User # i.e. 01 for User 1, 02 for User 2] or [Or you can scroll through your codes by using the right arrow key. To view the code press the [*]]
Press [*] to erase the code
Press # two times to exit

Partition Assignment Mask

Press [*5]
Enter Master Code]
Press [8]
Press [Enter User # i.e. 01 for User 1, 02 for User 2]
Press [*]
Press [< > to scroll and view each partition]
Press [*] to turn partition on [Y] or off [N]]
Press # two times to exit.

To program the attributes for each user code:

*****THIS CODE WILL NOTIFY POLICE OF AN EMERGENCY WHEN USED*****

Press [*5]
Enter [Master Code]
Press [99]
Press [User # i.e. 01 for User 1, 02 for User 2] or [Or you can scroll through your users by using the right arrow key. When you get to the correct user number press the [*]]

Press # two times to exit